




Parts and tools

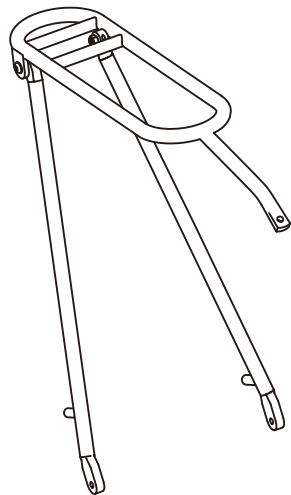

Rear carrier



M5 x 20mm



M5 x 16mm




Allen key #4




Wrench

1 Tighten the two 16mm lower screws

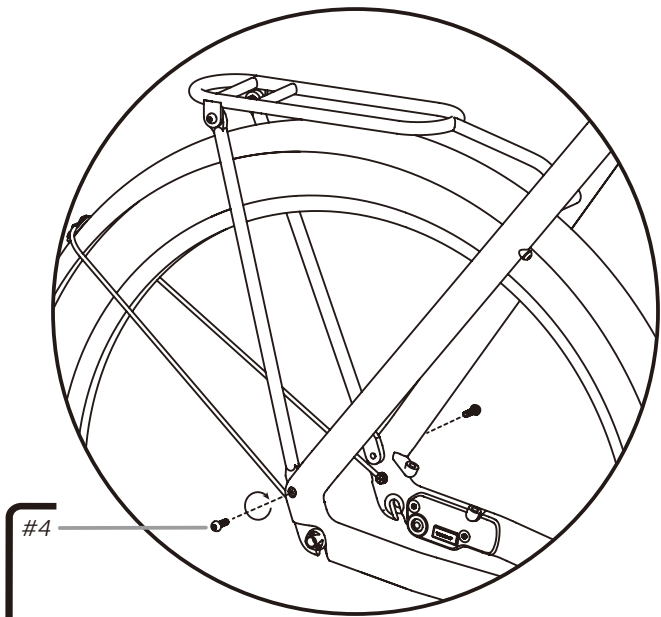

Make sure the carrier stays are on the inside of the rear dropouts.

2 Tighten the 20mm top screw

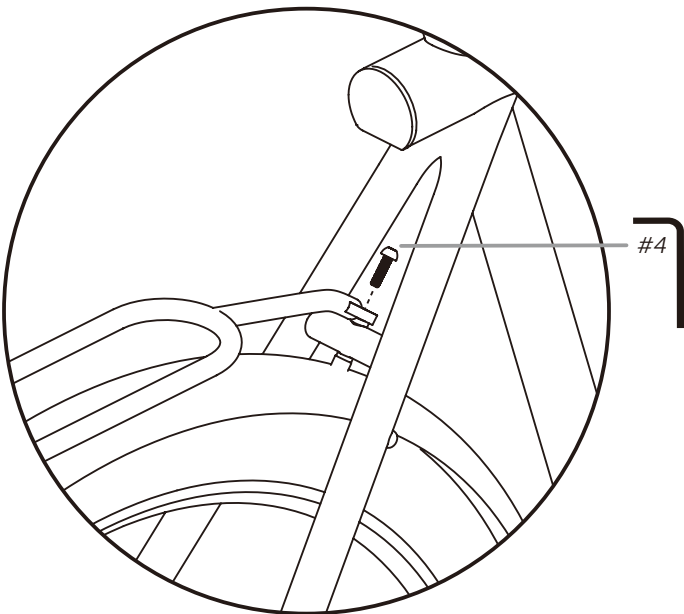

3 Tighten the carrier stay bolts

